

# ServoMaster: Metadata: controller/allow\_disconnect

## 1. Definition

`controller/allow_disconnect` *feature* reports whether the controller supports disconnected operation.

`controller/allow_disconnect` *property* determines whether controller departure is treated as a transient of catastrophic condition.