

# ServoMaster: Metadata: controller/maxservos

## 1. Definition

`controller/maxservos` *property* contains the maximum number of servos this controller is able to support.

Please note that this property may dynamically change value. For example, the USB [QuadServo](#) device may support one servo when bus powered, and the number of servos equal to number of connectors when self-powered.

### Note:

Even so, the QuadServo driver doesn't reflect this - it's just an example.