

ServoMaster: Metadata: servo/range/max

1. Definition

`servo/range/max` *property* contains the current minimum servo position expressed in units defined by [servo/range/units](#) *property*.

See also: [servo/range/min](#).