

ServoMaster: Metadata: servo/range/min

1. Definition

`servo/range/min` *property* contains the current minimum servo position expressed in units defined by [servo/range/units](#) property.

See also: [servo/range/max](#).